
SIMPLITZ[®] Solar Streetlight Integrated

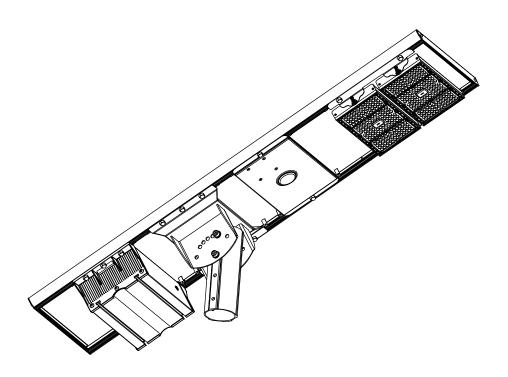


- Please read instruction carefully before assembling and installation
- Please keep instruction as reference in the future




OSRAM


SIMPLITZ[®] Solar Streetlight Integrated

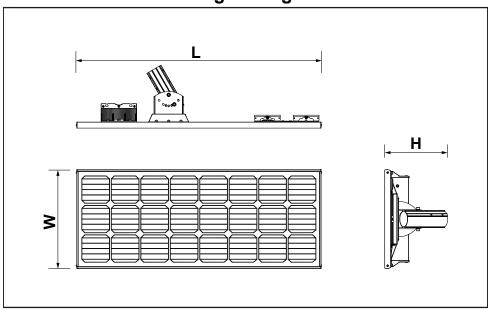



Model	L (mm)	W (mm)	H (mm)	Wattage (W)	Battery Voltage (V)	Ilnstallation height (m)	Weight (Kg)	Maximum projected area (m²)		IP	ta
								Front	Side		
SIM Solar ST Integrated 30W	506	348	133	30W	12V	6-9	11.5	0.178	0.065		45°C
SIM Solar ST Integrated 40W	686	348	133	40W	12V		12.8	0.242	0.088		
SIM Solar ST Integrated 50W	806	348	133	50W	12V	8-11	13.9	0.285	0.104		
SIM Solar ST Integrated 70W	1056	348	133	70W	12V		16.4	0.374	0.137		
SIM Solar ST Integrated 85W	1296	348	133	85W	12V	9-12	18	0.463	0.169		
SIM Solar ST Integrated 100W	906	538	133	100W	24V		18.1	0.529	0.189	0.5	
SIM Solar ST Integrated 30W Pro	806	348	133	30W	12V	6-9	14.5	0.285	0.104	65	
SIM Solar ST Integrated 40W Pro	1296	348	133	40W	12V		17.7	0.463	0.169		
SIM Solar ST Integrated 50W Pro	906	538	133	50W	12V	8-11	18.1	0.529	0.189		
SIM Solar ST Integrated 70W Pro	1156	538	133	70W	12V		21.3	0.598	0.150		
SIM Solar ST Integrated 85W Pro	1326	538	133	85W	12V	9-12	23.6	0.676	0.169		
SIM Solar ST Integrated 100W Pro	1706	538	133	100W	24V		30.3	0.884	0.221		


SIMPLITZ[®] Solar Streetlight Integrated

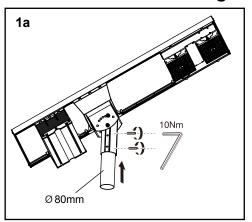


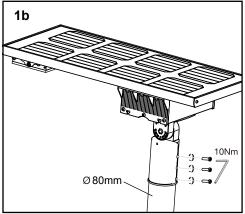

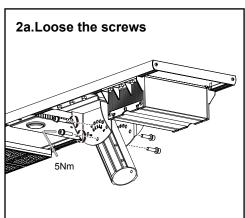


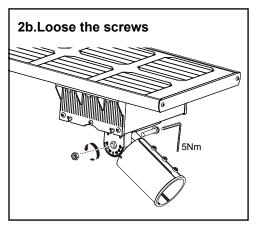


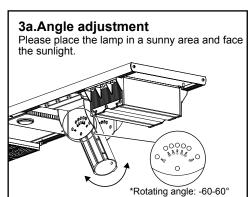


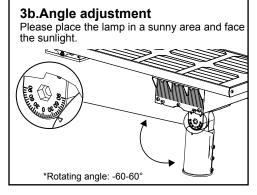

SIMPLITZ[®] Solar Streetlight Integrated

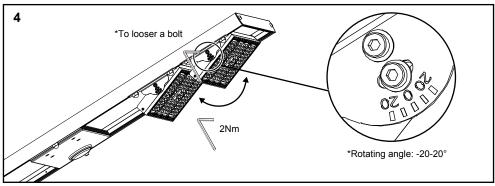

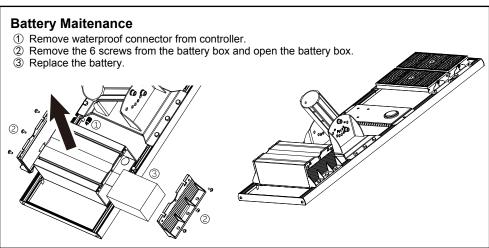

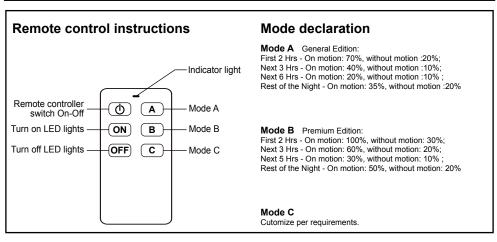

WARNING.

- 1. The light source of this luminaire is not replaceable: when the light source reaches its end of working lifetime, the whole luminaire should be replaced.
- 2. This luminaire cannot be disassembled by non professional personnel.
- 3. The maximum installation height of the luminaire is 12 meters.
- 4.1 uminaires are suitable for outdoor use.
- 5. Ensure the solar panels receive adequate sunlight, the tilt angle should be adjusted according to the local latitude, typically between 30 and 45, and oriented towards true south.
- 6. After installation, conduct a system test to ensure that the solar panels are generating power properly, the batteries are storing power correctly, and the LED lights are functioning normally.
- 7. Periodically check the cleanliness of the solar panels, removing dust and debris to ensure charging efficiency.
- 8. Regularly inspect the battery's charge level and condition, and replace it if necessary.

Traxon Technologies Ltd.

Room 113, wireless centre, 3 Science Park East Avenue, Shatin, Hong Kong

Traxon Technologies Europe GmbH

Karl-Schurz-Str.38, 33100 Paderborn, Germany

Traxon Lighting Company Limited

B402 - B421, Building 6, Northwest Shenjiu Science and Technology Pioneer Park, the intersection of Taohua Road and Binglang Road, Fubao Community, Fubao Street, Futian District, Shenzhen



