

e:touch 8"

Information for Use



Read the Information for Use and the Safety Instructions carefully. Subject to modification without prior notice.

Typographical and other errors do not justify any claim for damages. Modification of the product is prohibited.

This document is designed for electricians and system administrators of the product.

All product names and trademarks mentioned in this manual are trademarks of their respective owners.

Except for internal use, relinquishment of the instructions to a third party, duplication in any type or form - also extracts - as well as exploitation and / or communication of the contents is not permitted.

Downloads and more information at: www.ecue.com

IC: CL24100000255

Edition:

30.08.24 [EN_etouch8"_Setup_v1p1]

Published by:

Traxon Technologies Europe GmbH Karl-Schurz-Strasse 38 33100 Paderborn, Germany

©2024 Traxon Technologies Europe GmbH All rights reserved

Traxon Technologies Europe GmbH Sales Operations Karl-Schurz-Str. 38 33100 Paderborn, Germany +49 5251 54648-0 support@ecue.com

Table of Contents

1	General device description		03	
	1.1	Delivery content		03
	1.2	Optional accessories		03
	1.3	Connectors and Interfaces		03
	1.4	Product specifications		04
2	General remarks		04	
	2.1	Transport		04
	2.2	Unpacking		04
	2.3	Warranty regulations		05
	2.4	Maintenance and Repair		05
	2.5	Disposal		05
	2.6	Support		05
3	Installation		05	
	3.1	Ethernet connection		06
	3.2	Power supply		06
	3.3	Mounting		06
4	Dismounting		06	
5	Certi	Certifications		
6	Dime	Dimensions		

1 General device description

With the e:touch 8" you have customizable control points for your lighting installation. The capacitive touch screen allows a smooth selection of commands on the individualized display. Running the SymphoTouch app, the e:touch 8" is a control input for e:cue SYMPHOLIGHT projects, enabling flexible and creative UI design concepts. Polish your project at the user's touch point, using the wall mountable e:touch 8".

Highlights of the e:touch 8"

- · 8 inch touch screen
- · Power-over-Ethernet
- · Customizable UI (Buttons/Fader) via e:cue software
- · Simple mounting in standard with in-wall fittings

1.1 Delivery content

Delivery content of the e:cue e:touch 8":

- 1. e:cue e:touch 8" CL24100000255
- 2. Mounting plate
- 3. EU standard in-wall box
- 4. e:cue SymphoTouch app pre-installed
- 5. Welcome card, Safety instructions

If safety ins


If safety instructions are missing, please contact Traxon e:cue to receive a new copy.

1.2 Optional accessories

Ethernet Data Cable (RJ45) AA556130055SYMPL Switch AM313830035

1.3 Connectors and Interfaces

Rear

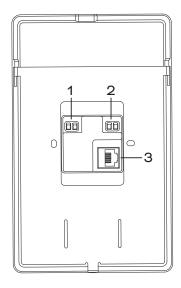

- 1 Power supply (V-, V+ left to right) (p. 06)
- 2 RS-485 (A, B left to right) currently not supported
- B Ethernet port (p. 06)

WWW.TRAXON-ECUE.COM

1.4 Product specifications

Dimensions (W x H x D)	124 x 200 x 11 mm /
	4.88 x 7.87 x 0.43 in
Weight	340 g / 0.75 lb
Power supply	12 V DC, 50 Hz
	or PoE IEEE 802.3af on RJ45
Power consumption	24 W @ 12 V DC
	13 W @ PoE
Operating temperature	-10 50 °C / 14 122 °F
Storage temperature	15 45 °C / 59 113 °F
Op. / Stor. humidity	0 75% RH, non-condensing
Protection class	IP20
Installation	Indoor installation only
Mounting	Wall mount on standard in-wall
	mounted boxes
Certificates	CE, UKCA, RoHS

Interface specifications

Display size	8 inch
Resolution	800 x 1280
Brightness	300 nt
System interface	1 x e:net / Ethernet 10/100 Mbit/s,
	RJ45
Sensors	Proximity sensor
Outputs	Speaker
User interfaces	Customizable UI (Buttons/Fader) via
	e:cue software

2 General remarks

2.1 Transport

Only transport the device in its original packaging. This protects the device from damage.

2.2 Unpacking

Only unpack the e:cue e:touch 8" at its installation location. To protect the device against condensation water, unpack it and wait until all moisture remaining in the device has evaporated. Condensation can occur when the device is moved from a cold to a warm location. Keep the packaging for use in case of further transport. Inspect all parts for completeness regarding chapter "1.1 Delivery content" on page 03. If there is apparent damage to the device or parts are missing from the delivery scope, please contact the Traxon e:cue Support service.

2.3 Warranty regulations

Depending on the product, warranty regulations are of different duration. The warranty time is usually noted in the quote and in the order confirmation. See www.traxon-ecue.com/terms-and-conditions for details. Legal warranty regulations apply in any case.

2.4 Maintenance and Repair

Only external cleaning might be necessary. This cleaning may only be carried out by skilled personnel. To clean the device, disconnect it from the line power supply. Disconnect all devices connected to the server. Do not use any cleaning agents containing solvents (e.g. acetone, alcohol, or thinner) or abrasives. The housing surface can be cleaned with a moist, lint-free cloth. Ensure that no water penetrates into the housing. Otherwise, this could damage the electronics.



- Before dismounting, appropriate measures must be taken to protect the respective components against damage caused by electrostatic discharge (ESD protection).
- Do not try to repair the device. Return it to your Traxon e:cue distributor for replacement or repair.

2.5 Disposal



Batteries and technical appliances must not be disposed of with domestic waste, but should be handed in at the appropriate collection and disposal points.

The proper disposal of packing materials and of the device is the responsibility of the respective user and for his account; in all other matters, the retrieval obligation for packing materials and the device is subject to the statutory regulations.

2.6 Support

In case of technical problems or questions regarding installation and repair please contact:

Traxon Technologies Europe GmbH
Customer Service
Karl-Schurz-Str. 38
33100 Paderborn, Germany
+49 (5251) 54648-0
support@ecue.com

3 Installation

The installation of the e:touch 8" consists of system ports connections, to power supply and of mounting the device. The sequence of cabling is not defined.

3.1 Ethernet connection

The pin-assignment of the Ethernet port corresponds to RJ45 standards. You can use every common Ethernet component, like cable. Connect the e:touch 8" at the designated Ethernet interface with a patch cable (RJ45, CAT5).

3.2 Power supply

The e:cue e:touch 8" can be powered via Power-over-Ethernet (PoE) or by an external power supply (PSU).

PoE:

Connect an Ethernet connection from a power sourcing device.


External power supply:

Connect the e:touch 8" to a 24 V DC power supply unit that complies with the local regulations. Present power supply equates to the status "On" or running of the e:touch 8".

To connect the device to a power supply unit, lay the wires as stated on the device.

3.3 Mounting

The e:touch 8" can be mounted in most standard in-wall mounted boxes (DE, US, UK, JP etc.). It is recommended to install it in a double-box to have more room for the cabling.

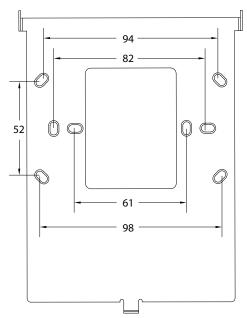

Attach the mounting plate to the wall. Hook the device to the mounting plate after all connections are done and fasten it with a srew at the bottom.

4 Dismounting



Before dismounting, appropriate measures must be taken to protect the respective components against damage caused by electrostatic discharge (ESD protection).

↑ conten

Dismount the e:touch 8" by unfastening the device from the mounting plate. Disconnect all attached cables. Unfasten the mounting plate from the wall. The dismounting is completed.

5 Certifications

(€

6 Dimensions

